


1. INSTALLATION DU SYSTEME D'EXTINCTION / FIRE EXTINGUISHER SYSTEM INSTALLATION

101. INSTALLATION DANS L'HABITACLE / COCKPIT INSTALLATION

- a) Emplacement et orientation du corps
Location and orientation of body
- b) Emplacement et orientation des buses
Location and orientation of nozzles
- c) Précaution à prendre lors de l'installation du système
Special care to take with the installation of the system

E1-1) Installation dans l'habitacle (emplacement et orientation du corps)

Cockpit installation (location and orientation of body)

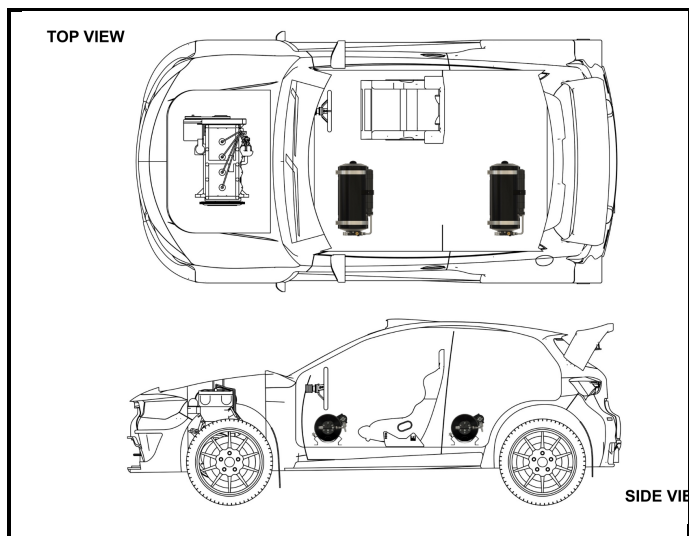


Transversally or longitudinally, and within the safety cell

Positioned as shown in E1-2

Ensure nozzle is mounted securely and is not obstructed obstructed. Ensure cylinder is not mounted where it will be exposed to extreme heat.

E1-2) Installation dans l'habitacle (emplacement et orientation des buses)

Cockpit installation (location and orientation of nozzles)

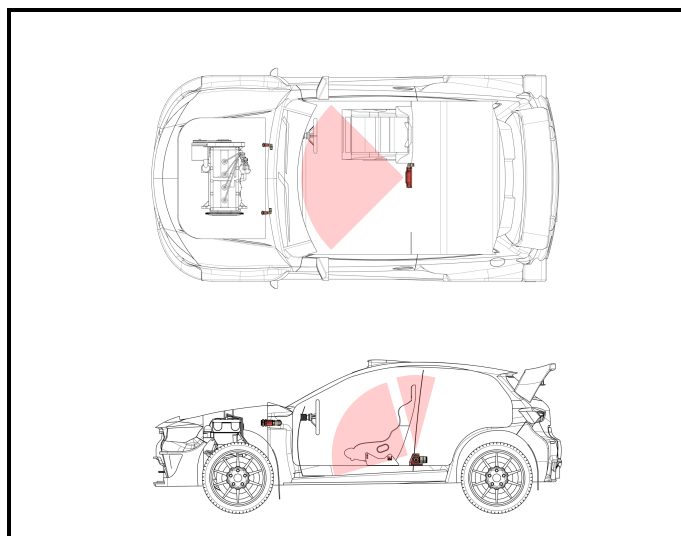


102. INSTALLATION DANS LE MOTEUR / ENGINE INSTALLATION

- a) Emplacement et orientation du corps
Location and orientation of body
- b) Emplacement et orientation des buses
Location and orientation of nozzles
- c) Précaution à prendre lors de l'installation du système
Special care to take with the installation of the system

E2-1) Installation dans le moteur (emplacement et orientation du corps)

Engine installation (location and orientation of body)

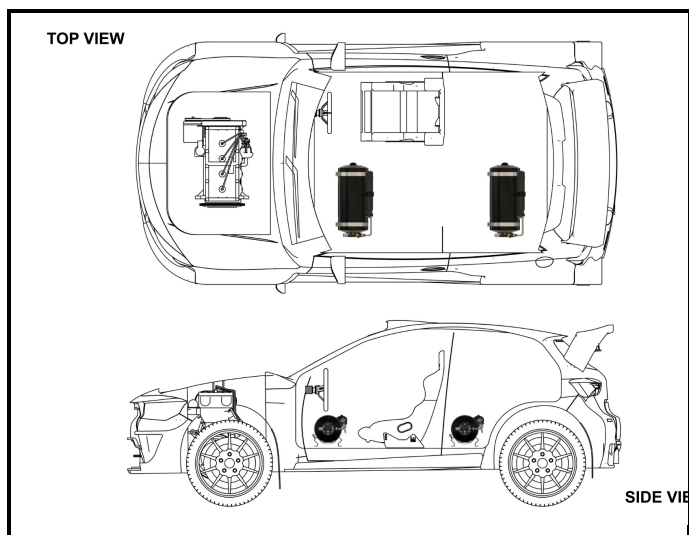

Transversally or longitudinally, and within the safety cell

Positioned as shown in E2-2

Ensure nozzle is mounted securely and is not obstructed obstructed. Ensure cylinder is not mounted where it will be exposed to extreme heat.

E2-2) Installation dans le moteur (emplacement et orientation des buses)

Engine installation (location and orientation of nozzles)

