

# MULTI-FLO AFFF SYSTEMS

FIA HOMOLGATION NUMBER: - EX

# Installation Instructions

Please read carefully before attempting to install your system.



The Mill House, Tamworth Road, Packington Hayes Nr Lichfield, Staffordshire, England WS14 9PN Tel: 01543 434580 Fax: 01543 434581 E-mail: sales@spa-uk.co.uk Web Site: www.spa-uk.co.uk

# Firesense-Response FireAde AFFF Multi-flo Systems covered by this manual

MFE400A-4-A-FA	4 Ltr Electrical/Auto Alloy
MFM400A-4-A-FA	4 Ltr Mechanical/Auto Alloy
MFM400A-4-FA	4 Ltr Mechanical Alloy
MFE400S-4-A-FA	4 Ltr Electrical/Auto Steel
MFM400S-4-A-FA	4 Ltr Mechanical/Auto Steel
MFM400S-4-FA	4 Ltr Mechanical Steel
MFE75A-4-A-FA	3.375 Ltr Electrical/Auto Alloy
MFM75A-4-A-FA	3.375 Ltr Mechanical/Auto Alloy
MFM75A-4-FA	3.375 Ltr Mechanical Alloy
MFE75S-4-A-FA	3.375 Ltr Electrical/Auto Steel
MFM75S-4-A-FA	3.375 Ltr Mechanical/Auto Steel
MFM75S-4-FA	3.375 Ltr Mechanical Steel
MFE75A-4-A-SL-FA	A3.375 Ltr Electrical/Auto Alloy Slimline
MFM75A-4-A-SL-F	43.375 Ltr Mechanical/Auto Alloy Slimline
MFM75A-4-SL-FA	3.375 Ltr Mechanical Alloy Slimline



The Mill House, Tamworth Road, Packington Hayes Nr Lichfield, Staffordshire, England WS14 9PN. UK Tel: 01543 434580 Fax: 01543 434581 E-mail: sales@spa-uk.co.uk

E-mail: sales@spa-uk.co.uk Web Site: www.spa-uk.co.uk

Thank you for purchasing a FireSense-Response AFFF Multi-flo System (which has been FIA homologated).

It is important that you read the following instructions carefully before attempting to install your fire suppression system.

The performance of this system will be affected if it is in anyway modified or tampered with it will void its homologation. Please ensure that should any parts need to be replaced, only genuine SPA FireSense-Response components are used.

Should you require any assistance, please do not hesitate in contacting SPA Design on 01543 434580.

#### IMPORTANT NOTE

The purpose of this along with any other vehicle fire suppression system is to provide sufficient time in which to control the fire to enable the occupants to leave the vehicle. In ideal conditions, the fire will be extinguished completely but this can not be guaranteed. The main purpose is to curb the intensity of either an engine or cockpit fire to provide the means for the occupants to leave the vehicle or for outside assistance to be given.

# CONTENTS

Fitting Instructions – Electrical System	Page 4-7
Fitting Instructions – Mechanical System	Page 8-10
Cylinder mounting	Page 11-12
Nozzles & Installation	Page 13-14
Tubing	Page 15
Kit Lists Component Check	Page 16
System Maintenance	Page 17
Bottle Dimensions	Page 18-20
Pipework & Nozzle layout	Page 21-23
Safety Data Sheet	Page 24
Agents	Page 25-28

#### Automatic Head


The new activation valve fitted to certain models all ending with the letter A within this new range of systems has a special safety feature that does not interfere with the standard operating procedure of the fire suppression system.

The automatic activation feature is a stand alone activation that will operate independent of user input at a temperature specified by the manufactuer.

#### IMPORTANT NOTE

The fire suppression system requires input by the user by either mechanical (cable pull) or electrical (switch) to operate, the automatic activation is a safety backup only, it is not the primary means of activation, the primary means of activation is the driver using the cable pull or electrical switch depending on model purchased.

# SPA FIRESENSE-RESPONSE ELECTRICAL SYSTEM WIRING SCHEMATIC APPLIES TO ALL ELECTRIC MODELS

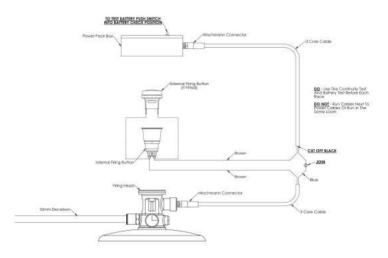

- To test the battery, push and hold control box switch upwards in the "Battery Check" position until yellow light flashes.
- If the extinguisher tubing is to be removed, push the black collett in and pull the tubing out at the same time.

**RECOMMENDED:** Use the continuity test and battery test before each race.

DO NOT: Run the cables next to power cables, or in the same loom.

# ELECTRICAL FITTING INSTRUCTIONS

Unpack all parts and check components against 'kit list'.

- Remove bottle from mounting brackets if fitted by undoing the wing nuts. Decide the best position for the extinguisher – IT IS RECOMMENDED THAT THE BOTTLE SHOULD BE MOUNTED IN THE FORE AND AFT DIRECTION OF THE VEHICLE.
  - The extinguisher label, detailing the contents and the pressure gauge should be clearly visible for inspection, Mount the retaining brackets securely to the vehicle and put the bottle back into place. (Refer to Figure 3.)
- Mount the power pack in a clearly visible position.
- Switch with red plastic shroud to be fitted in the cockpit so that it is in easy reach of both the driver and/or co-driver when sitting in the normal driving position and wearing fully fastened seat-belts.
- The other switch with flexible red membrane (waterproof) is to be fitted to the outside of the vehicle, close to the exterior master switch (for activation by the Marshals).
- Once the system has been wired as per wiring diagrams (refer to Figure 1 / 2), thefollowing tests should be carried out to check the system is fitted correctly and will operate when required. (See Page 5)

# SPA DESIGN FIRESENSE-RESPONSE ELECTRICAL DETAILS

The SPA FireSense-Response system uses actuators to operate valves located with in the pressurized container that contains the extinguishant. These are triggered remotely using a battery-powered power pack.

In order to guarantee reliable operation the connectors used are 1P67 and the actuators used are of a military specification with the system / battery test electronics integrated into the power pack.

The power pack electronics can test the continuity of the wiring, and also provides a high current pulse test to ensure system integrity before use. Unlike other systems, the battery test will not destroy or put an excessive drain on the battery during this critical test. These tests are performed using a three way switch on the power pack box and should be performed before each usage of the system, since the system is only as good as the battery that powers it and the integrity of the wiring loom and its connectors.

To check the condition of the battery press and hold up the switch on the power pack box in battery check position. **Every two seconds you will see a <u>YELLOW</u>** light flash.

If the light flashes very dimly the battery must be

If the light flashes very dimly the battery must be replaced.

#### IF IN DOUBT REPLACE THE BATTERY !!!!

To check the continuity of the wiring, ensure that the switch on the power pack box is in the **SYSTEM**INACTIVE position to ensure that the extinguisher is not fired.

Press the internal firing button and check that the <u>RED</u> light comes on, press the external firing button, and check that this also makes the <u>RED</u> light come on.

The external button must be positioned close to the exterior master switch

When you are ready to race after all these checks push switch into system armed position, the control box will not illuminate in the system armed position if either internal or external switches are pressed the system will activate

<u>**DO**</u> ensure that the wiring cables do not run next to looms especially if they contain ignition or battery cables


**<u>DO</u>** ensure that any exposed connections that are likely to get water sprayed are protected.

**<u>DO NOT</u>** allow cables to run through sharp edged apertures without protection


**<u>DO NOT</u>** fix cables to any surface that is likely to see excessive temperatures.

### MECHANICAL CABLE SETUP

#### LEVER VALVE

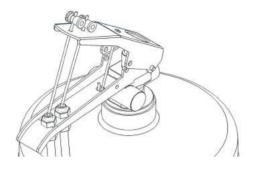

#### MECHANICAL AUTO HEAD

 



Make sure Cable is secure.



Once cable is secure, remove safety pin before race, when race is finished replace safety pin.


## MECHANICAL SYSTEM

The system uses two T-handle pull cables, one 6ft long and one 12 ft long.

- Remove bottle from mounting brackets if fitted by undoing the wing nuts. Decide the best position for the extinguisher IT IS RECOMMENDED THAT THE BOTTLE SHOULD BE MOUNTED IN THE FORE AND AFT DIRECTION OF THE VEHICLE. The extinguisher label, detailing the contents and the pressure gauge should be clearly visible for inspection, Mount the retaining brackets securely to the vehicle and put the bottle back into place. (refer to Figure 3).
- Insert the end of the Decabon tube into the push-in fitting on the lever-valve and lay the length of the tube from the cylinder to the chosen location; plug the nozzle onto the free end of tube and orientate this to point the nozzles onto anticipated fire sources.
- Mount the 6-ft cable in the cockpit within reach of the driver and / or co-driver when sitting in the normal driving position wearing seat-belts. The other end of the cable is to be threaded through one of the adjusting screws on the handle of the lever-valve (on the cylinder). Then threaded through one of the holes in the other handle and the clamp screw made secure on cable against the underside in such a way that movement of the red pull handle will close the handles of the lever-valve, BUT allowing 6mm of free-play. CAUTION: do not allow this testing to actually move the handles or the valve may open and release the extinguishant (keep the safety pin in place).


- Mount the 12-ft cable on the outside of the vehicle (close to the exterior master switch is the recommended position). Lay the cable inside the vehicle and connect to the lever-valve as above.
- Pull cables should be fitted in such a way that no kinks or 'S' bends are formed, which could cause malfunction.
- Removing the safety pin from the lever-valve leaves the system ready for use.
- SAFETYWARNING Failure to remove safety pin will render the system inoperable when required.

# EXTINGUISHER MOUNT BRACKET

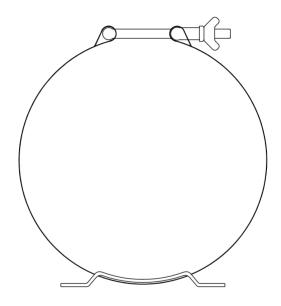

SP144 – 6" Cylinder Retaining Bracket SP148 - 5" Cylinder Retaining Bracket

# ANTI TORPEDO MOUNT MANDATORY ON ALL FIA SYSTEMS

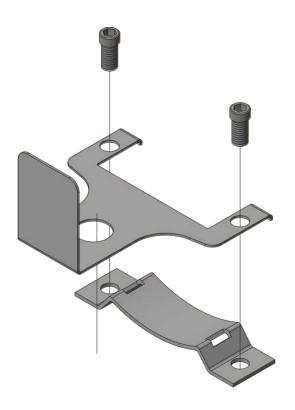

#### A.F.F.F. NOZZLES

It is important that all of the nozzles provided in the fire system kit are used.

The nozzles will produce a fine atomized spray with the AFFF emerging as a milky white foam substance, which forms a film barrier starving the fire of oxygen. This foam spray has the capability of excellent fire out times and has a cooling effect, which can control re-ignition.

When locating the nozzles it should be noted that there is a

90° cone with a 1/2 meter spray.

Nozzles should not simply be supported by their own pipe work. Where necessary support the nozzle in a bracket.

Nozzles should be checked for damage/possible blockage. They should also be tested to ensure that they are in good working order.

Depending on the class of racing/rallying, (which is the competitors responsibility) e.g. International rallying, which needs a 41t system, the engine bay must have 2 nozzles installed, with one each side of the motor and 2 nozzles installed in the cockpit.

For open cars, the system must include two nozzles one should be aimed at the drivers midriff with special care being taken not to spray into the drivers face.


For saloon /closed cars 2 nozzles must be fitted within the cockpit area. Nozzles should be fitted either to the top of the roll bar main hoop (door B pillar) pointing inwards and downwards towards the foot of the diagonally opposite front roll bar hoop base (door A post) or either under the dashboard aiming at the drivers midriff.

These are guide lines for competitors using SPA Design fire suppression systems


#### IF IN DOUBT. ASK!!!

# Example of Cockpit nozzle location.

# Nozzle location refer to Page 13

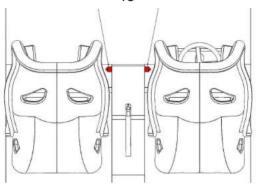

## EXAMPLE OF ENGINE NOZZLE LOCATION

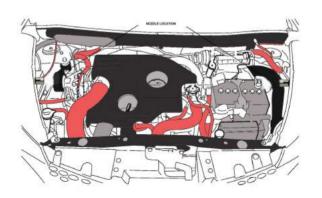

## **TUBING**

Each FireSense-Response System kit is supplied with Decabon tubing which is a coated aluminium tube which can be molded and flexed to suit this application. The FireSense-Response system has been designed and homologated using 10mm & 8mm dia tube. DO NOT substitute this tube for any other type.

## **TUBE CONNECTIONS**

All fittings for tube to nozzles and bottle are of the push-in type. Insert the tube into the fitting, push firmly until it clicks. Once in you should not be able to pull it out.

To remove the tubing, push the tube into the fitting and at the same time push/pull the black collett back towards the fitting and then pull the tube from the fitting.

### **KIT LISTS**

### 4 LTR & 3.375 Ltr Multi-Flo Electrical

Electrical system comes fitted with firing head.

- 2 x SP144 6" Cylinder Retaining Bracket
- 2 x SP319 6" Anti Torpedo Mounting Tab
- 1 x SP007H Power Pack (Hirschman as standard)
- 2 x SP005H Plug & Lead
- 1 x SP011 Internal Fire Button
- 1 x SP012 External Fire Button
- 4.5 x SP016 8mm Decabon Tubing (Mtr)
- 0.5 x SP072 10mm Decabon Tubing (Mtr)
- 4 x SP031 8mm Nozzle
- 2 x SP028 8mm Tee
- 1 x SP029 8mm Bulkhead Fitting
- 1 x SP183 10mm-8mm Y Piece connector
- 1 x SP017 'E' location sticker
- 1 x SP129 Small 'E' Location Sticker

#### 4 Ltr & 3.375 Ltr Multi-Flo Mechanical

Mechanical System comes fitted with Lever Valve or Mechanical Head

- 2 x SP144 6" Cylinder Retaining Bracket
- 2 x SP319 6" Anti Torpedo Mounting Tab
- 1 x SP018 6ft Pull Cable
- 1 x SP019 12ft Pull Cable
- 4 x SP031 8mm Nozzle
- 2 x SP028 8mm Tee Piece
- 1 x SP029 8mm Bulkhead Fitting
- 1 x SP183 10mm-8mm Y Piece connector
- 4.5 x SP032 8mm Decabon Tubing (Mtr)
- 0.5 x SP072 10mm Decabon Tubing (Mtr)
- 1 x SP017 'E' Location Sticker
- 1 x SP129 Small 'E' Location Sticker

## **MAINTENANCE**

To ensure maximum possible performance from your SPA Fire FireSense Response system, the following checks and maintenance procedures should be carried out.

- Regularly check the pressure gauge to ensure they are in the green section.
- Regularly check nozzles for debris or any obstructions externally and internally.
- Regularly check the integrity of the pipe work and fitting.
- Regularly check the cylinder for physical damage or corrosion.
- Regularly check the mounting brackets, retaining straps and bolts are secure.
- Regularly check your power pack control box and condition of the internal. alkaline battery, the battery should be changed preferably every 6 months or if system has been fired off.
- Regularly check your wiring and electrical connectors for any damage.
- If the system has been activated the nozzles and pipe work should be washed through with fresh water and then cleared with an air line if possible to avoid residue of the extinguishant crystallizing in the pipe work or nozzles.
- Your SPA fire suppression system must be serviced every 2 years, a service due date is written on the contents label located on your cylinder. It is up to you to ensure the services are carried out at the correct intervals.
- If your system has been discharged or requires a 2-year service you must return it to SPA or an approved agent of SPA fire suppression systems.


## **NOTES**

Please ensure that you monitor the following, as you  $\underline{may}$   $\underline{not}$  pass scrutineering  $\underline{if}$ ;

- The needle on the gauge is in the red section
- The bottle contents label is worn, damaged or unreadable.
- The unit is not within the service date.
- The system is in a poor condition


### **BOTTLE DIMENSIONS**

Ô[ ç^|• Á[ ||[ ¸ ã \* ÁT [ å^|•

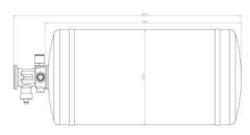

TØÒI€€©EËËÖEFA TØTI€€©EËËÖEFA


T ØÒ75A-4-A-FA MFM75A-4-A-FA

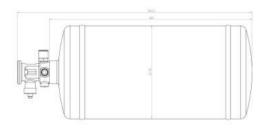


MFE400S-4-A-FA MFM400S-4-A-FA

MFE75S-4-A-FA MFM75S-4-A-FA

### **BOTTLE DIMENSIONS**

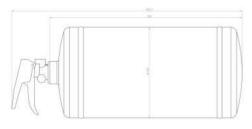


MFM400S-4-FA MFM75S-4-FA

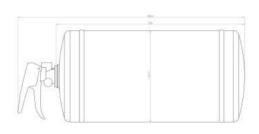



MFM400A-4-FA MFM75A-4-FA


### **BOTTLE DIMENSIONS**

 

# Pipework and Nozzle Layout Electrical and Mechanical Systems

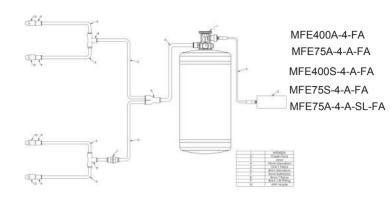

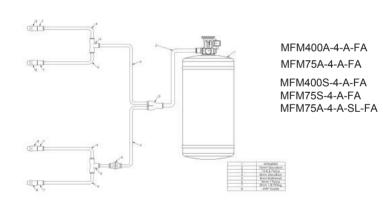

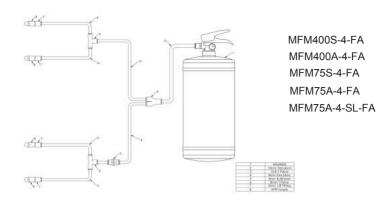

# SAFETY DATA SHEET FOR AFFF (Aqueous Film Forming Foam)

**APPLICATION** Autosport industry –

including saloon, single

seaters and other racing cars.

**CONTENTS** Hydral AR 3x3 Low

Viscosity AFFF, Water

**COMPOSITION** Water, Ethaned ol,

Ethylene glycol, Urea, Sod um Monodecylsulfate,

Diethylene Glycol Monobutyl Ether,

Caprylcapr lyl Glucos de

**APPEARANCE** Clear Liquid with a hint of

blue

**pH** Approx. 6.5 - 8.5

**BOILING POINT** 100°C (initial)

VAPOUR PRESSURE Approx. 17.6 mm Hg Calc @

20°C

WATER SOLUBILITY Miscible

FREEZING POINT -10°C

PHYSICOLOGICAL Non-harmful.

**PROPERTIES** 

# SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

#### **ATS MOTORSPORT**

30 SCHOONGEZICHT RD BERGBRON JOHANNESBURG SOUTH AFRICA PH: 0027 11 726 6314

FAX: 0027 11 673 5185
E: <u>atsleeke@global.co.za</u>
www. ats-motorsport.co.za

#### **DANIELSON EQUIPEMENT**

5 RUE CHAMP MAGNY 58470 MAGNY COURS

**FRANCE** 

PH: 0033 386 212 255 FAX: 0033 386 212 265

E: contact@danielson-equipement.com

www. danielson-equipement.com

#### **R&R LOGISTICS NI LTD**

7 CADGER RD CARRYDUFF BELFAST BT8 8AU

Contact: Jonathan Martin / Raymond Moore

PH: 02895 213335
E: jonathan@rr-ni.com
www. raceandrally.com

#### MURRAY MOTORSPORT

UNIT 20 BEECHLAWN IND COMPLEX GREENHILLS RD

DUBLIN 12

EIRE

PH: 00353 1 4500555 FAX 00353 1 4500585

E: <u>info@murraymotorsport.ie</u> www. murraymotorsport.ie

#### **GULFSPORT RACING LLC**

UNIT 8 INDUSTRIAL AREA 4 STREET 29 DUBAI, UAE Contact: Mike Scott

PH: 00971 4 341 5438 FAX: 00971 4 341 5438

E: mike.scott@gulf-sport.com

#### **GIEFFE SRL**

VIASAN GIULIANO 39A 15040 CASTELCERIOLO (AL) ITALY

PH: 0039 0131 216505 FAX: 0039 0131 216506

E: damiano.logiudice@gieffesrl.it

www. gieffesrl.it

#### KH MOTORSPORT

RAMSASEN 665 91 KIL SWEDEN

PH: 00465 421040 FAX: 00465 421165

E: kh.msport@swipnet.se www. khmotorsport.se

#### **ORECA**

PARC DACTIVITES DE SIGNES

AVE DE ROME 83870 SIGNES

FRANCE

PH: 0033 494 885 801 FAX: 0033 494 328 001 E: lcourdon@oreca.fr

www. oreca.fr

#### DES MOORE RALLYING

46 CARRICKADUFF RD CARNAGH CO. ARMAGH

BT60 3HZ

PH: 02837 538633 FAX: 02837 539286 E: <u>des@dmrr.net</u> www. dmrr.net

#### RECHSTEINER RACING S A

ZONE INDUSTRIELLE DES PRES MORES 1315 LA SARRAZ

SWITZERLAND Tel: 0041 21 866 1666 Fax: 0041 21 866 1667

Email: pa.rechsteiner@rechracing.com

Website: www.rechracing.com

### SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

#### **BOTH IMPORTS**

55 NORTH TERRACE HACKNEY SA 5069 ALISTRALIA

PH: 0061 8 8113 0600 FAX: 0061 8836 28811 F: spalite@nttvres.com.au

www. nttyres.com.au

#### IMPORT PARTS

SEPN 504 BL.C.I.OJA 34 ED MARIANA BRASILIA DE

BRA7II

CEP 70 730 - 523

PH: 0055 61 326 2614 FAX: 0055 61 326 7717 E: ip-parts@uol.com.br www. ip-part.com

#### SERVALL INC

GREEN HILL ST MICHAEL BARBADOS WEST INDIES

PH: 001 246 424 5912 FAX: 001 246 429 4854

#### MERLIN MAILORDER

THE BRIDGESTONE BUILDING CASTLE COMBE MOTOR BACING CIRCUIT NR CHIPPENHAM

WILTSHIRE, SN14 7FX, UK PH: 01249-782101 FAX: 01249782161

#### **RACER INDUSTRIES**

286 SOUTHPORT NERANG ROAD SOUTHPORT QUEENSLAND 4215 AUSTRALIA Tel: 0061 7 5591 8198 Fax: 0061 7 5591 6458

Email: sales@racerindustries.com

Website: www.racerindustries.com.au

#### NEIL ALLPORT MOTORSPORT

34 OLIVE BD PENROSE AUCKI AND NEW ZEALAND

PH: 00649 579 0113 FAX: 00649 579 0114 E: sales@namsport.co.nz

www.namsport.co.nz

#### **NOVA ENGINEERING**

220 - 1 OHMIKA OYAMA - CHO SUNTO - GUN SHIZUOKA 410 - 1308 JAPAN

PH: 0081 550 780329 FAX: 0081 550 780064 E: nova-eng@mail.wbs.ne.ip

#### **GUNNAR AASKOV MOTORSPORT**

CREDITOR 231826 KORNMARKEN 2. GRAVENT

DK-6040 FGTVFD DENMARK

PH: 0045 75 55 32 90 FAX: 0045 75 55 38 85

F: mail@aaskov-motorsport.dk

#### SPA TECHNIQUE INC

8225 INDY LANE INDIANAPOLIS 46214

PH: 001 317 271 4941 FAX: 001 317 271 7951 E: info@spatechnique.com www.spatechnique.com

#### MARDI GRAS MOTORSPORT LTD

LINIT 45 SILVERSTONE CIRCUIT TOWCESTER

NN12 8G7 Tel: 01327 858 006 Fax: 01327 858 800

**NORTHANTS** 

Email: info@mardigras.co.uk Website: www.mardigras.co.uk

# SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

#### **ALL FIRE SECURITY**

BRANDBEVEILIGING MARLIER BVBA ROESELARESTRAAT 180 WEVELGEM 8560 BEI GILIM

Tel: 0056 42 32 29 Fax: 0056 42 00 83

Email: info@allfiresecurity.be Website: www.allfiresecurity.be

#### **HCGROUP**

222 SRI WORACHAK BLD NO G8 LUANG ROAD DOMPRAB, BANGKOK THAILAND 10100 Tel: 00662 223 1144

Fax: 00662 226 3660 Email: info@hcthailand.com Website: www.hcthailand.com

#### **MOTORSPORT ASIA**

SUITE 22 - 1 LEVEL 22 MENARA PANGLOBAL NO 8 LORONG P RAMLEE 50250

KUALA LUMPUR Tel: 00603 2026 1680

Fax: 00603 2026 1681 Email: mal@motorsportasia.com

Website: www.afos.com

### SPEEDMASTER 7 HARFFIELD CLOSE

NORTH EPPING NEW SOUTH WALES 2121

AUSTRALIA Contact: Tony Dunn

TEL: (02) 9868 5899 Mob: 0404 007 768

Email: tony@speedmaster.net.au

#### MTEC FORMULA TECHNOLOGY

MAKELA RACING TEAM URHEILUTE 4 RANTSILA 92500 FINLAND

Contact: Miikka Makela TEL +358 (0) 40 867 8197 Email: miikka@makelracing.fi

## THE CROSSLE CAR COMPANY LIMITED

RORY'S WOOD OLD HOLYWOOD ROAD HOLYWOOD CO DOWN BT18 9QS

Tel: 0044 (0) 28 9076 3332 Fax: 0044 (0) 28 9076 0676 Email: arnie@crossle.fsnet.co.uk Website: www.crossle.co.uk

#### **OSATUONTI RACING SHOP**

PUROKATU 9 21200 RAISIO FINLAND

Tel: 00358 500 525342

Email: myynti@osatuontiracingshop.fi Website: www.osatuontiracingshop.fi

#### PERFORMANCE RACEGEAR

246 GREAT EASTERN HWY ASCOT WA 6104 AUSTRALIA Contact: Mike Nairn

TEL: (08) 6461 6919 Mob: 0424036418

Email: mike@performanceracegear.com.au

#### **AUTOSLANGER**

RANTZAUSGAVEVEJ 5 8355 SOLBJERG DENMARK

Contact: Benjamin Muusmann PH: +45 228678790

E: benjamin@autoslanger.dk

#### REVOLUTION RACEGEAR

592 WHITEHORSE ROAD MITCHAM VICTORIA 3132 AUSTRALIA Contact: Tullio Salta

Tel: 03 9873 8700 Fax: 03 9873 8711

Email: tullios@racegear.com.au Web: www.revolutionracegear.com.au

# SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

#### **COMPLETE FIRE & SAFETY**

43 ALLARDICE STREET STONEHAVEN ABERDEEN, AB39 2AB SCOTLAND Contact: Garrith Glennie Tel: 01224 911 148

Mob: 07518 339528 Email: garrith@firesafety247.co.uk

# BERNICO INTERNATIONAL RACING

VICTOR DUMONLAAN 6 2830 WILLEBROEK ANTWERP BELGIUM Contact: Raf Van Belle Tel: +32 34558728

Fax: +32 34550088 Email: magazijn@bernico.be



